



# MEDISEPT

Perfect disinfection



## Professional cleanliness

floors • surfaces • sanitary facilities • kitchens

[www.medisept.biz](http://www.medisept.biz)

# Index



**Floors..... 3-6**

- Mediclean 110 Floor..... 3
- Mediclean 111 Automat..... 3
- Mediclean 112 Shine..... 3
- Mediclean 113 Panel..... 4
- Mediclean 121 Striper..... 4
- Mediclean 130 Strong..... 4
- Mediclean 160 Gres..... 5
- Mediclean 141 Polimer..... 6
- Mediclean 142 Polimer..... 6



**Surfaces..... 7-9**

- Mediclean 200 Indust..... 7
- Mediclean 201 Indust..... 7
- Mediclean 210 Surface..... 7
- Mediclean 211 Office..... 8
- Mediclean 220 Glass..... 8
- Mediclean 230 Wood..... 8
- Mediclean 240 Steel..... 9
- Mediclean 250 Glue..... 9
- Mediclean 260 Fugue..... 9



**Sanitary facilities..... 10-11**

- Mediclean 310 Sanit..... 10
- Mediclean 311 Foam..... 10
- Mediclean 315 Power..... 10
- Mediclean 320 WC..... 11
- Mediclean 330 Chlorine..... 11
- Mediclean 340 Tube..... 11



**Kitchen hygiene..... 12-14**

- Mediclean 510 Dishes..... 12
- Mediclean 520 Sanit Cream..... 12
- Mediclean 530 Grill..... 12
- Mediclean 540 Dishes..... 13
- Mediclean 550 Dishes..... 13
- Mediclean 570 All..... 13
- Mediclean 580 Lime..... 14



**Soaps..... 15**

- Mediclean 410 Soap..... 15
- Mediclean 420 Scrub..... 15



**Fresheners..... 15**

- Mediclean 610 Fresh..... 15
- Mediclean 620 Fresh..... 15

# Mediclean 110 Floor

Concentrate for the everyday care and cleaning of PVC, linoleum, terrazzo, stoneware tiles, terracotta, marble and other flooring

Concentrate for the care and cleaning of floors. Recommended for everyday cleaning and care of all water-resistant floors, except carpets and untreated wood floors. Perfect for manual and automated cleaning using automatic cleaning machines and floor scrubbing machines. Leaves a shine on the washed surfaces as a thin protective film, which protects the floor and has antistatic properties. Product based on low-foaming detergents. May be used in food industry facilities. Contains a wax emulsion with anti-slip properties. May be used simultaneously with disinfectants. For professional use only.

Instructions for use: Dilute, depending on the degree of dirt: MANUAL CLEANING: 25 to 200 ml per 10 L of cold water. MACHINE CLEANING: 25 to 100 ml per 10 L of cold water. Clean the surface and allow to dry.

Contains: surfactants, care substances, wetting compound, complexing compounds, water-soluble solvents, preservatives, fragrance composition, dyes.


 Exotic fruits fragrance

 Fruits of the forest fragrance

 Orange fragrance

 White flowers fragrance





Dilution:  
25 – 200ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 8±0,5

# Mediclean 111 Automat

Low-foaming concentrate for the everyday care and cleaning of floors, including by machine cleaning

Low-foaming product for all kinds of cleaning machines. Appropriate for cleaning floors sensitive to alkaline agents. Thanks to the low concentration, it is economical to use. It has a pleasant scent and antistatic properties. It has an anti-slip effect. The waxes in the product leave a shine and a protective film. For professional use only.

Instructions for use: Depending on the degree of dirt, use a dilution of 25 to 200 ml per 10 L of cold water. Clean the surface and allow to dry.

Contains: surfactants, care substances, water-soluble solvents, complexing compounds, fragrance composition, dyes.


 Concentrate

 Manual and machine cleaning

 Floors

 Orange fragrance





Dilution:  
25 – 200ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 9±0,5

# Mediclean 112 Shine

Self-shine emulsion for the care and protection of floors, including PVC, linoleum, terrazzo, stoneware tiles, terracotta and marble

Recommended for maintaining plastic, PVC, stone and marble surfaces, as well as floor panels. The product has anti-slip properties. Perfect for stairs. Gives a sustainable shine after waxing. Prevents dust from settling. Does not require stripper. In order to remove older layers it is recommended to use: Mediclean 110 Floor or Mediclean 210 Surface. For professional use only.

Instructions for use: APPLYING THE EMULSION: dilute the product with water at a ratio of 1:1 to 1:3 and apply onto the clean surface. To obtain a better shine, use the emulsion undiluted. *Note: Before applying the emulsion, turn off all sources of heat, e.g. radiators, underfloor heating.* FOR CARE: dilute 100-150 ml per 10 L of water for smooth surfaces or 150-200 ml per 10 L of water for porous surfaces.

Contains: acrylic waxes, waxing substances, care substances, preserving substances.


 Emulsion

 Manual and machine cleaning

 Floors - cleaning and polishing

 Neutral fragrance





Dilution:  
100 – 200ml →  
10L of cold water

Applying:  
3 – 10L →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 8±0,5



# Mediclean 113 Panel

## Concentrate for everyday cleaning of lacquered wood panelling and floors

Concentrated product for cleaning and maintenance of floor and wall panelling and wooden parquet floors. Efficiently cleans, degreases and protects from dirt. For professional use only.

- Instructions for use: Everyday cleaning: 25-100 ml of the agent per 10 L of cold water.
- Contains: surfactants, care substances, wetting compounds, water-soluble solvents, preserving substances, fragrance composition.


Concentrate

Manual cleaning

Panelling and wooden floors

Pear & apple fragrance





Dilution:  
25 – 200ml →  
10 L of cold water

Packaging: 1 L bottle, 5 L canister  
pH 8±0,5

# Mediclean 121 Striper

## Concentrate for removing old wax and polymer layers on surfaces resistant to alkalis (terrazzo, PVC, stoneware tiles, terracotta, linoleum and rubber flooring)

Potent, unscented liquid agent for removing old wax and polymer layers on alkali resistant surfaces. Intended for use before applying new protective coats. Recommended for thorough cleaning of stoneware tiles and other hard floors. Low foam product. Perfect for manual and machine cleaning. For professional use only.


- Instructions for use: Depending on the thickness of the protective coats and hardness of the acrylic, use a dilution of 0.5 to 2.5 L per 10 L of cold water. Apply the diluted solution onto the surface, leave for 5-15 minutes, scrub and then neutralise the surface by cleaning it with water.
- Contains: surfactants, wetting compounds, wax removers, sodium hydroxide, complexing compounds.

Concentrate

Manual and machine cleaning

Floors





Dilution:  
0,5 – 2,5L →  
10L of cold water

Packaging: canister 5 L  
pH 13,5±0,5

# Mediclean 130 Strong

## Highly alkaline concentrate for thorough cleaning of floors

A concentrate for thorough cleaning of floors with scrubbing machines. Effective also for everyday cleaning of heavy dirt with a mop. Efficiently removes crusted dirt, soot, marks from handcars and footwear in shops, industrial plants and shopping arcades. Good for all types of floors resistant to alkaline agents. For professional use only.


- Instructions for use: THOROUGH CLEANING: Use a dilution of 500-1000 ml per 10 L of cold water. Apply the solution to the floor and leave for 10-15 minutes, next scrub and remove the dissolved dirt. DAILY CLEANING: Clean floors with a dilution of 100-500 ml per 10 L of cold water.
- Contains: surfactants, wetting compounds, complexing compounds, alkalis, phosphates.

Concentrate

Manual and machine cleaning

Floors





Daily cleaning:  
100 – 500ml →  
10L of cold water

Thorough cleaning:  
500 – 1000ml →  
10L of cold water

Packaging: 1 L bottle, 5 L canister  
pH 13,5±0,5

# Mediclean 160 Gres

Concentrate for cleaning stoneware, natural and artificial stone, ceramic tile flooring and other surfaces resistant to acids

A concentrate to thoroughly clean stone, ceramic and other types of surfaces - resistant to acids. Perfect for manual and machine cleaning. Leaves no streaks. Perfect for removing mineral sediments such as calcium, rust, cement sediment, stone and salt marks as well as for grout cleaning and whitening stainless steel and aluminium surfaces. Neutralizes alkaline dirt and efficiently removes calcium and salt sediments from most hard floor surfaces and carpets, and also from industrial surfaces. It has a neutral, gentle fragrance. For professional use only.

Instructions for use: Depending on the degree of dirt, use dilution: DAILY OR PERIODIC CLEANING: 100-200 ml per 10 L of cold water (1-2%). THOROUGH CLEANING AND REMOVAL OF SALT MARKS: 500-1000 ml per 10 L of cold water (5-10%) (use without diluting if necessary). Apply the solution with a scrubbing machine or mop, leave for 3-10 minutes. Remove dissolved dirt with a scrubbing machine, wet vacuum or mop. Neutralise with water. CAUTION! Polished marble and terrazzo tiles should be cleaned regularly with an agent with a neutral pH.

Contains: aminosulphonic acid, nitric acid, water-soluble solvents, surfactants, solubilizers.


 Concentrate

 Manual and machine cleaning

 Floors

 Neutral fragrance





**Dilution:**  
100 – 500ml →  
10L of cold water

Packaging: 1 L bottle, 5 L canister  
pH 1±0,5



In accordance with the WHO recommendations  
**CLEANING**  
IS AN ESSENTIAL FIRST STEP  
in any disinfection process



CHECK PROMOTION ON THE CLEANING AGENTS ON [WWW.MEDISEPT.BIZ](http://WWW.MEDISEPT.BIZ)



All MEDISEPT disinfection and cleaning products are manufactured based on the ISO 13485 quality assurance system for medical devices certified by TUV Nord.



# Mediclean 141 Polimer

Polymer coating for the protection of waterproof surfaces like linoleum, PVC and terrazzo

An efficient product based on acrylic and polyurethane emulsions and waxes, for sealing most kinds of water-resistant hard floors. The product leaves a thick, durable protective coat, resistant to scratches and dirt penetration, thanks to which dirt is easy to remove. Applying several coats of the product levels the imperfections resulting from the floor's porous structure and damage caused by use. It has an anti-skidding effect. The coat does not change the colour of the surface, which allows local repairs. Disinfection resistant. Ensures a long-lasting shine. For professional use only.

Instructions for use: Turn off any underfloor heating. Remove the old coat with *Mediclean 121 Striper*, next clean the surface with water and allow to dry. With a mop apply 2-3 layers of *Mediclean 141 Polimer*. Coat drying time: 15-30 minutes.

In case of the porous or very absorptive floors, apply 2 more layers of the product. In order to seal the coat and obtain a mirror shine, it is recommended to polish the surface with a high-speed machine and white pad.

MAINTENANCE: Sweep the floor every day with a dry mop, clean with *Mediclean 110 Floor* or *Mediclean 210 Surface*. Repair local damage by diluting *Mediclean 141 Polimer* in a ratio of 1:2 with cold water, spray (mist) the damaged surface and polish with a high-speed machine (min. 1,500 rpm). In case of a lack of a polisher, clean the floor with *Mediclean 141 Polimer* diluted to 1:5 to 1:25 L of cold water or *Mediclean 112 Shine* in accordance with the instruction on the label.

Contains: waxes, polyurethanes, acrylic polymers, solubilizers, preservatives.



Polymer




Polishing



Floor  
varnishing



Neutral  
fragrance



Efficiency:

2 – 3L →  
100 m<sup>2</sup>

Packaging: canister 5 L  
pH 8,8±0,5

# Mediclean 142 Polimer

Polymer coating for the protection of waterproof surfaces like linoleum, PVC, terrazzo and concrete

An efficient product based on acrylic and polyurethane emulsions and waxes, for sealing most kinds of water-resistant hard floors. The product leaves a thick, durable protective coat, resistant to scratches and dirt penetration, thanks to which dirt is easy to remove. Applying several coats of the product levels the imperfections resulting from the floor's porous structure and damage caused by use. It has an anti-skidding effect. The coat does not change the colour of the surface, which allows local repairs. Disinfection resistant. Ensures a long-lasting shine. For professional use only.

Instructions for use: Turn off any underfloor heating. Remove the old coat with *Mediclean 121 Striper*, next clean the surface with water and allow to dry. With a mop apply 2-3 layers of *Mediclean 142 Polimer*. Coat drying time: 15-30 minutes.

In case of porous or very absorptive floors, apply 2 more layers of the product. In order to seal the coat and obtain a mirror shine, it is recommended to polish the surface with a high-speed machine and white pad.

MAINTENANCE: Sweep the floor every day with a dry mop, clean with *Mediclean 110 Floor* or *Mediclean 210 Surface*. Repair local damage by diluting *Mediclean 142 Polimer* in a ratio of 1:2 with cold water, spray (mist) the damaged surface and polish with a high-speed machine (min. 1,500 rpm). In case of a lack of a polisher, clean the floor with *Mediclean 142 Polimer* diluted to 1:5 to 1:25 L of cold water or *Mediclean 112 Shine* in accordance with the instruction on the label.

Contains: waxes, polyurethanes, acrylic polymers, preservatives.



Polymer



Polishing




Floor  
varnishing



Neutral  
fragrance





Efficiency:

2 – 3L →  
100 m<sup>2</sup>

Packaging: canister 5 L  
pH 8±0,5



# Mediclean 200 Indust

Alkoline concentrate for cleaning surfaces in industrial rooms, workshops and other facilities

For cleaning floors and other surfaces in industrial rooms, workshops and other facilities. Recommended for washing machines, car engines, tarpaulins and workwear. Uniquely selected ingredients emulsify and remove grease (including graphite grease), oils, soot and dry dirt from all water-resistant surfaces. For professional use only.

- Instructions for use: Depending on the type and degree of dirt, use dilution: 200-300 ml per 10 L of water.
- AUTOMATIC CLEANING MACHINES: 100-400 ml per 10 L of cold water.
- HIGH-PRESSURE WASHER: 50-200 ml per 10 L of cold water.
- Contains: sodium hydroxide, anionic surfactants, complexing compounds, complexing substances, solubilizers.

Concentrate

Floors


Machines, workwear

Manual and machine cleaning



Potent





Dilution:  
50 – 400ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 13,5±0,5

# Mediclean 201 Indust

Alkaline concentrate for cleaning surfaces in industrial rooms, workshops and other facilities

For cleaning floors and other surfaces in industrial rooms, workshops and other facilities. Recommended for washing machines, car engines, tarpaulins and workwear. Uniquely selected ingredients emulsify and remove grease (including graphite grease), oils, soot and dry dirt from all water-resistant surfaces. For professional use only.

- Instructions for use: Depending on the type and degree of dirt, use dilution: 200-300 ml per 10 L of water.
- AUTOMATIC CLEANING MACHINES: 100-400 ml per 10 L of cold water.
- HIGH-PRESSURE WASHER: 50-200 ml per 10 L of cold water.
- Contains: sodium hydroxide, anionic and non-ionic surfactants, phosphates, complexing compounds, water-soluble solvents.


Concentrate

Floors

Machines, workwear

Manual and machine cleaning





Dilution:  
50 – 400ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 13,5±0,5

# Mediclean 210 Surface

Concentrate for everyday cleaning of all kinds of washable surfaces, such as furniture, windows, doors, walls, floors, etc.

Universal product for daily use on different water-resistant surfaces such as: lacquered surfaces, plastic, ceramic tiles, marble, glass, doors, windows, furniture, etc. Does not leave streaks. Cleaned surfaces gain a delicate shine and fragrance as well as antistatic properties. Efficiently removes dirt and protects from dirt. The product can be used in food processing facilities, also on surfaces having contact with food. For professional use only.

- Instructions for use: Depending on the degree of dirt, use a dilution from 25 to 200 ml per 10 L of cold water. Clean the surface and allow to dry. Surfaces having contact with food should be additionally rinsed with potable water.
- Contains: anionic and non-ionic surfactants, wetting compounds, water-soluble solvents, complexing compounds, preservatives, fragrance composition, dyes.


Concentrate

Washable surfaces

Red fruits fragrance

Green tea fragrance





Dilution:  
25 – 200ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 8±0,5

# Mediclean 211 Office

Foam for cleaning washable surfaces: furniture, office machines, counters, walls, glazes, windows, etc.

A product in the form of a foam, versatile on water-resistant surfaces. Perfect for cleaning furniture, office devices, tops, walls, tiling, glass and other lacquered, enamelled, and ceramic plastic and glass surfaces. The product has excellent cleaning and antistatic properties, does not allow or leave streaks. Product fragrance does not contain potential allergens. For professional use only.

- Instructions for use: Spray the surface with foam and wipe with a microfibre cloth or paper towel.
- Contains: non-ionic surfactants, water-soluble solvents, acrylic copolymer, fragrance composition, dyes.

Foam

Washable surfaces

Windowpanes

Green tea fragrance



Packaging: 500 ml bottle with spray nozzle  
pH 8,5±0,5

# Mediclean 220 Glass

Liquid for cleaning glass, mirrors and other glass surfaces, such as: shop windows, refrigerated display cases, car windows and glazed surfaces

Window cleaner for panes, mirrors and other glass surfaces, such as shop windows, refrigerated display cases, etc. Thanks to the alcohol content it quickly dries and efficiently cleans without leaving streaks. The product is convenient to apply and it has a pleasant fragrance. After application it leaves a protective coat that seals the cleaned surface from dirt. The product has antistatic properties. For professional use only.

- Instructions for use: Spray directly onto the surface and wipe with a microfibre cloth or paper towel until a perfect shine is obtained.
- Contains: surfactants, isopropyl alcohol, fragrance composition, dyes.

Liquid

Windowpanes

Fresh breeze fragrance



Packaging: 500 ml bottle with spray nozzle, canister 5 L  
pH 8,5±0,5

# Mediclean 230 Wood

Cream for cleaning and care of wooden and laminate furniture

Thanks to the content of natural waxes and silicones it coats the surfaces and protects them from dust and soiling. The product is efficient, has a pleasant fragrance and does not leave streaks. Use only on treated wood. For professional use only.

- Instructions for use: Shake before use. With a soft and dry microfibre cloth, spread a thin layer of the cream on the surface. Polish until the excess of the product dissolves.
- Contains: silicon emulsion, was emulsion, surfactants, isopropyl alcohol, fragrance composition, preservatives.

Cream

Wooden and laminate furniture

Rose fragrance



Packaging: 500 ml bottle with spray nozzle  
pH 8±0,5



# Mediclean 240 Steel

## Preparation for cleaning and care of stainless steel surfaces

Ready-to-use product for cleaning, polishing and maintaining stainless steel, aluminium and galvanised steel surfaces. Removes dirt, gives surfaces a high gloss finish and ensures protection from rust and oxidisation. Removes fingerprints, streaks and stains. Prevents dirt from accumulating. For professional use only.

- Instructions for use: Ready-to-use product. Apply the product to a microfibre cloth or directly onto the surface to be cleaned. Wipe it and polish with a clean and dry microfibre cloth.
- Contains: oleic acid ester, fragrance composition.

 Spray

 INOX Stainless steel



Packaging: 500 ml bottle with spray nozzle  
pH 8±0,5

# Mediclean 250 Glue

## Preparation for removing stickers, adhesive tape, chewing gum and pen marks

Ready to use product to remove local marks from stickers, adhesive tape, chewing gum and pens. Recommended for all surfaces. Check the surface to ensure the suitability of the product before use (may cause discolouring). For professional use only.

- Instructions for use: Apply directly on the mark. Wait. The longer the contact, the more effective the result. To remove a sticker, use a brush and/or microfibre cloth.
- Contains: non-ionic surfactants, monoethanolamine, solvent.

 Spray

 Removal of sticker marks



Packaging: 500 ml bottle with spray nozzle  
pH 11±0,5

# Mediclean 260 Fugue

## Strong preparation for thorough cleaning of floor and wall grout

Specialist product intended for cleaning floor and wall grout. Immediately dissolves difficult-to-remove inorganic dirt without scrubbing. Works within 20 seconds of application. For professional use only.

- Instructions for use: Wet the grout with water and apply the product. Depending on the degree of dirt, wait 15 seconds to 5 minutes. Remove the dissolved dirt and neutralise the surface by cleaning it with clean water. In case of lighter soiling, the preparation can be diluted 1:1 with cold water. Do not apply to surfaces sensitive to acids (perform a test on a small surface).
- Contains: nitric acid, water-soluble solvents, surfactants.

 Spray

 Grout



Packaging: 500 ml bottle with spray nozzle  
pH 1±0,5

# Mediclean 310 Sanit

Concentrate for cleaning bathroom fittings and such sanitary ware as: toilet bowls, urinals, bidets and basins

For cleaning all sanitary surfaces and articles resistant to acids. Efficiently removes limescale, rust, soap marks and greasy dirt. Recommended for basins, toilet bowls, urinals, shower cabins and fittings, as well as stainless steel and aluminium elements. Ensures perfect cleanliness, leaving a pleasant smell. The product does not damage the surfaces. It has an antibacterial effect. It may be used in food industry facilities. For professional use only.


- Instructions for use: DAILY CLEANING: Depending on the degree of dirt, use a dilution of 25 to 200 ml per 10 L of cold water. THOROUGH CLEANING: apply the undiluted agent onto the surface, wait 5-10 minutes and rinse.
- Contains: phosphoric acid, aminosulphonic acid, water-soluble solvents, wetting compounds, fragrance composition, dyes.

Concentrate

Sanitary surfaces

Cherry fragrance





Dilution:  
25 – 200ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 1±0,5

# Mediclean 311 Foam

Foam for cleaning shower cabins, glazed surfaces, plastic and glass shower cases

Ready-to-use product in a foam form for cleaning shower cabins, shower bases, plastic and glass shower cases, and bathroom and kitchen fittings. Perfectly removes limescale, rust, soap stains and greasy sludge. Cleaned surfaces gain a gentle fragrance and flawless finish. It has antibacterial properties. It may be used before or after disinfectants. For professional use only.

- Instructions for use: Spray the surface with the foam, wait a few minutes, wipe with a microfibre cloth or a sponge, and rinse.
- Contains: aminosulphonic acid, surfactants, water-soluble solvents, fragrance composition, dyes.

Foam

Sanitary surfaces

Shower cabins, fittings

Black grape fragrance



Packaging: 500 ml bottle with spray nozzle  
pH 1±0,5

# Mediclean 315 Power

Strong concentrate for cleaning sanitary surfaces

A concentrate with an enhanced cleaning effect for dirt typical for sanitary surfaces: limescale, rust, soap marks and organic dirt. Recommended for cleaning all sanitary surfaces and articles resistant to acids. Recommended for basins, toilet bowls, urinals, shower cabins and fittings and stainless steel elements. The product does not damage the surfaces. It has antibacterial effect. Recommended for use in food processing and health care facilities, and similar. It may be used before or after disinfectants. For professional use only.

- Instructions for use: DAILY CLEANING: Depending on the degree of dirt, use a dilution of 25 to 200 ml per 10 L of cold water. THOROUGH CLEANING: Apply the undiluted agent onto the surface, wait 5-10 minutes and rinse.
- Contains: aminosulphonic acid, nitric acid, water-soluble solvents, surfactants, colouring matter.

Concentrate

Sanitary surfaces

Shower cabins, fittings

Bathtubs, basins, sinks

Potent 



Packaging: bottle 1 L, canister 5 L  
pH 1±0,75

# Mediclean 320 WC

## Antibacterial gel for cleaning and descaling sanitary surfaces

A gel for daily cleaning of toilet bowls, urinals, bidets, basins and fittings. Efficiently removes limescale and soap marks. The consistency of the gel ensures it adheres even to vertical surfaces, for prolonged time of contact with the surface and more effective cleaning. It has antibacterial properties and a pleasant smell. For professional use only.

- Instructions for use: CLEANING TOILET PANS, BIDETS etc. Apply the undiluted agent directly onto the surface, wait 5-10 minutes and rinse. CLEANING BASINS AND FITTINGS: Apply the product on a sponge or microfibre cloth, wipe, then rinse and wipe dry.
- Contains: non- ionic surfactants, phosphoric acid, aminosulphonic acid, sodium chloride, fragrance composition, dyes.

Antibacterial

Sanitary surfaces

Shower cabins, fittings

Apple fragrance



Packaging: bottle 750 ml, canister 5 L  
pH 1±0,5

# Mediclean 330 Chlorine

## Preparation for cleaning and whitening toilet bowls, urinals, baths, basins, shower bases, sinks, drains, dustbins and waste containers

Chlorine product for cleaning and whitening all sanitary surfaces. Neutralizes unpleasant smells and removes discolourations resulting from fungi. The use of active chlorine guarantees dissolving of hard-to-remove dirt and ensures a high level of hygiene. Efficiently cleans grouts and surfaces sensitive to acids. For professional use only.

- Instructions for use: SANITARY WARE: Spread the product on the surface, rinse with water after 15 min. WASTE CONTAINERS, DUSTBINS, LARGE SANITARY SURFACES: use a dilution of 100 ml per 10 L of cold water. Before applying the product, perform a test. Warning! Do not mix with other products.
- May release dangerous gases (chlorine).
- Contains: sodium hypochlorite, surfactants, sodium hydroxide, fragrance composition.


Antibacterial ingredients

Sanitary surfaces

Shower cabins, fittings

Garbage bins





Dilution:  
100ml → 10L  
of cold water

Packaging: bottle 750 ml, canister 5 L  
pH 13±0,5

# Mediclean 340 Tube

## Preparation for unclogging pipes and sewage drains

Active cleaning product in the form of a granulate. Self-acting and extremely efficient dissolving of solid dirt (organic), i.e. fat, leftovers, hair and sediments; it unclogs pipes and sewage drains, and solves the problem of unpleasant smell. Contains caustic soda and an aluminium activator. Does not damage the seals in the sewage connections. Works in cold water. For professional use only.

- Instructions for use: Turn the nut (dosing unit) while squeezing at the marked points on the sides. Slowly pour one full nut into the drain hole and then pour about 200 ml of cold water. Leave for at least 30 minutes and rinse with plenty of water. CAUTION: Do not exceed the recommended amount of the product. Do not use for acrylic. In order to prevent unpleasant smells, use half of the regular amount of the agent once a week.
- Contains: sodium hydroxide, fillers, fragrance composition.

Powder

Drain cleaner for bathtubs and sinks

Toilet bowls and urinals



Packaging: bottle 600 g



# Mediclean 510 Dishes

Liquid for manual dish washing, kitchen equipment and surfaces

Universal liquid for manual dish washing, as well as cleaning of all surfaces and kitchen equipment. It has a pleasant mint fragrance. It leaves no streaks or seepages. The coconut oil derivative contained in the product protects hand skin from irritation. Neutral pH. Dermatologically tested. For professional use only.

- Instructions for use: Pour 5 ml of the liquid (1 teaspoon) into 5 L of water. Rinse clean dishes with water and leave to dry or wipe dry.
- Contains: anionic, non-ionic and amphoteric surfactants, complexing compounds, preservatives, fragrance composition, dyes.


 Liquid

 Dishes and cutlery

 Lemon fragrance

 Mint fragrance





Dilution:  
5ml → 5L  
of water

Packaging: bottle 1 L, canister 5 L  
pH 7±0,5

# Mediclean 520 Sanit Cream

Cleaning cream for smooth surfaces

Cleaning cream for all kinds of smooth surfaces, i.e. stainless steel, ceramics, cookers, glazing and terracotta, tiles, enamel, porcelain, draining boards, sinks, etc. It removes limescale, water sediments, rust, soap residues as well as burnt and greasy dirt. Seals, leaves no scratches and streaks. Provides visible and sensible freshness and a delicate lemon fragrance.

- Instructions for use: Shake before use. Apply an amount of cream appropriate to the size of the cleaned surface onto a damp microfibre cloth or directly onto the surface, wipe and then rinse with water. The quality of the product guarantees an immediate cleaning effect.
- Contains: surfactants, cleaning substances, fragrance composition, preservatives.

 Cream

 Dishwashers, water heaters, kettles

 Bathtubs, basins, sinks

 Lemon fragrance



Packaging: 650 g bottle  
pH ok. 10

# Mediclean 530 Grill

Foam for cleaning and degreasing burned surfaces

A ready-to-use, strong agent in a foam form for removing greasy, burned dirt from different kinds of alkali-resistant surfaces. Recommended for grills, ovens, barbecues, gas and electric cookers, fireplaces, smokehouses, etc. Do not use on aluminium. For professional use only.

- Instructions for use: Spray the dirty surface with the product and leave for about 2-5 minutes. Wipe with a sponge or clean with a brush. In case of difficult-to-remove dirt, repeat the process. Rinse the surface with clean water. Leave to dry. In order to obtain a better result and accelerate cleaning, it is recommended to heat the surface to approx. 50°C.
- Contains: potassium hydroxide, surfactants.

 Foam

 Greasy and burnt surfaces

 Surfaces having contact with food



Packaging: 500 ml bottle with spray nozzle, canister 5 L  
pH 13±0,5

# Mediclean 540 Dishes

## Concentrate for machine dish washing in professional dishwashers

Alkaline concentrate to wash glass and other tableware, cutlery and kitchen equipment in industrial dishwashers and professional washing equipment. Removes remaining stains of proteins, sugar and starch, as well as dried leftovers that are difficult to clean. The highest efficiency of cleaning is achieved with use of demineralised or soft water. A low foam product with a neutral smell. Does not contain chlorine or phosphates. Do not use on aluminium or alloys of light metals. Can be used in convection-steam ovens. For professional use only.

Instructions for use: Recommended with the dishwasher cycle, average 1-5 ml per 1 L of water (for demineralised or soft water), while for increases in water hardness, the concentration of the product should be increased. For hard water, additionally use acid rinse aid.


Contains: sodium hydroxide, complexing compounds, organic acid, polycarboxylate.

Concentrate

Dishes and cutlery

Professional dishwashers





Dilution:  
1 – 5ml →  
1L of water

Packaging: canister 10 L  
pH 13±0,5

# Mediclean 550 Dishes

## Preparation for machine rinsing and shining of dishes in professional dishwashers

Gentle rinse aid for rinsing and shining dishes in food industry and industrial dishwashers. Ensures perfect cleanness and high gloss of dishes and equipment. Leaves surfaces with no streaks or stains. Recommended for automatic dosing. Can be used in convection-steam ovens. Prevents calcium deposits. Low foam product with a neutral smell. For professional use only.

Instructions for use: Recommended with the dishwasher cycle, average 1-3 ml per 1 L of water (for demineralised or soft water), while for increases in water hardness, the concentration of the product should be increased.


Contains: polycarboxylate, organic acid, wetting substance, preservatives.

Liquid

Dishes and cutlery

Professional dishwashers





Dilution:  
1 – 3ml →  
1L of water

Packaging: canister 5 L  
pH 3±0,5

# Mediclean 570 All

## Neutral concentrate for surface cleaning and degreasing

Strong degreasing agent for cleaning of all kinds of water-resistant floors and all equipment surfaces in the food industry (mass catering kitchens, food processing plants etc.) as well as for surfaces heavily soiled with grease and dirt in workshops and sports halls. Suitable for use in cleaning machines and high-pressure washers. For professional use only.

Instructions for use: Depending on the degree of dirt, use dilution: REGULAR DIRT: 50 to 200 ml per 10 L of cold water. HEAVY DIRT: use a higher concentration solution. After application on surfaces that are in contact with food, rinse with potable water.

Contains: surfactants, fragrance composition, preservatives.


Concentrate

Floors

Surfaces having contact with food

Sports flooring





Dilution:  
50 – 200ml →  
10L of cold water

Packaging: bottle 1 L, canister 5 L  
pH 8±0,5

Mediclean 580 Lime

Concentrate for descaling and cleaning professional dishwashers and other devices, such as kettles, boilers and bain maries

Active cleaning concentrate for dishwashers and other gastronomic devices. Efficiently removes limescale, rust, limestone sediment, cement sediment, and other mineral sediments, produced during the use of the device. Does no damage to stainless steel, tiled and glass surfaces. Do not use for enamelled or aluminium surfaces, or surfaces made from non-ferrous metals and plastic. Unscented, low-foam. For professional use only



Instructions for use: DISHWASHERS: Turn off the cleanser dosing. Fill the machine with water. Depending on the thickness of sediments, pour about 100 ml of the concentrate per 1 L of water. Turn on the machine for 10-15 minutes. After the process is finished, remove the working solution and rinse the whole machine with water or fill with clean water and start the rinsing without the cleanser program. Removable and heavily dirty elements of the dishwasher should be put in a 10% working solution and then carefully rinsed with water or start rinsing with a water program in the dishwasher.

IRREMOVABLE SEDIMENT, RUST: Apply a small amount of the concentrate onto the ceramic surface or parquet floor resistant to acids, spread the product with a brush or sponge, wait a few minutes and, after removing the dirt, rinse with water.

Contains: phosphoric acid, nitric acid.

Concentrate

Professional dishwashers

Descaling of kitchen appliances

Dilution:  
approx. 100ml →  
1L of water

Packaging: bottle 1 L, canister 5 L  
pH 1±0,5

Procedures • Video instructions • Hygiene plans

Prepared in order to help preventing infections, adjusted to the most recent sanitary and epidemiological requirements

IF YOU WOULD LIKE TO...

- ...GUARANTEE THE HIGHEST LEVEL OF HIGIENE AT YOUR PREMISES
- ...GUARANTEE THE SECURITY OF YOUR STAFF AND CUSTOMERS
- ...BE PERFECTLY PREPARED FOR SANITARY EPIDEMIOLOGICAL INSPECTION

DOWNLOAD ON [www.medisep.biz](http://www.medisep.biz)

Hygiene plans

Disinfection techniques

Sets of procedures





# Mediclean 410 Soap

## Liquid soap for hands and body

Delicate liquid soap that contains skin-friendly cleansing agents. Thanks to the glycerine and coconut oil derivative, it protects the skin from excessive drying and gently moistures. The soap foams easily and has a pleasant fragrance. Skin friendly pH. Can be used for hands and the whole body.

- Instructions for use: Apply some soap onto wet hands, spread and rinse with water.
- Contains: anionic and amphoteric surfactants, moisturizing substances, preservatives, fragrance composition.

 Emulsion

 Hand washing

 White flowers fragrance



Packaging: bottle 500 ml, canister 5 L  
pH 5,5±0,5

# Mediclean 420 Scrub

## Antibacterial liquid soap for hands and body

High quality liquid antibacterial soap, gently moisturising thanks to the delicate cleansing and refining agents. Does not contain dyes or aromatic components. Skin-neutral pH, glycerine and coconut oil derivative for daily hand washing without irritation. Recommended for use in food processing facilities, healthcare institutions, schools, kindergartens and restaurants.

- Instructions for use: Apply some soap onto wet hands, spread and rinse with water.
- Contains: anionic and amphoteric surfactants, moisturizing substances, antibacterial substance, preservatives.

 Antibacterial

 Emulsion

 Hand washing




Packaging: bottle 500 ml, canister 5 L  
pH 5,5±0,5


# Mediclean 610 Fresh

## Air freshening in bathrooms, toilets, offices and other public spaces

Leaves a fresh scent in the room and at the same time neutralizes and removes unpleasant odours. Appropriate to use in bathrooms, offices and other public spaces. Contains fragrance without potential allergens. For professional use only.

- Instructions for use: Spray in rooms or on water-resistant surfaces.
- Contains: fragrance composition, propylene glycol, isopropyl alcohol, preservative, dyes.

 Spray

 Air freshener



Citrus / dark grapes / marine / green tea / pomelo  
Packaging: 500 ml bottle with spray nozzle  
pH 7±0,5

# Mediclean 611 Fresh

## Air freshening in bathrooms, toilets, offices and other public spaces

Leaves an exceptionally long-lasting, exclusive scent in the room and at the same time neutralizes and removes unpleasant odours. Appropriate to use in bathrooms, offices and other public spaces. Contains fragrance without potential allergens. For professional use only.

- Instructions for use: Spray in rooms or on water-resistant surfaces.
- Contains: fragrance composition, propylene glycol, isopropyl alcohol, preservative, dyes.

 Spray

 Air freshener

 Money fragrance



Packaging: 500 ml bottle with spray nozzle  
pH 7±0,5



# MEDISEPT


Perfect disinfection

**We are a leading European manufacturer of disinfectants, and professional cleaning agents. Our products are used in and by hospitals, private clinics, dental and medical surgeries, public institutions and are available in medical shops and via network of distributors.**

Medisept has implemented a Quality Management System for medical manufacture and has been certified in accordance with EN ISO 13485 in the scope of design, production and distribution of for invasive and non-invasive medical products.

In 2014, we launched the most modern production line in the industry and an innovative research centre in factory

We effectively protect people by providing modern and comprehensive solutions in the field of hygiene and disinfection – this is our mission, that we are implementing in our everyday work. Our values help us to achieve this goal: commitment, cooperation and knowledge sharing, responsibility, professionalism, consistency in action and respect.

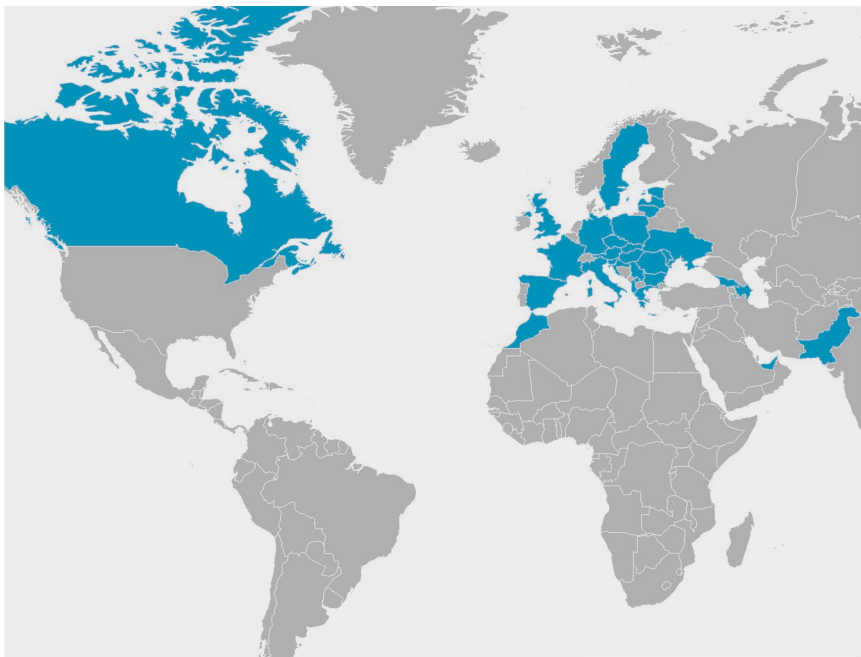

Manufacturer:  
MEDISEPT Sp. z o.o.,  
Konopnica 159 c  
21-030 Motycz, Poland

tel.: +48 81 535 22 66  
fax: +48 81 535 22 37  
export@medisept.pl

rev. 2021.07

[www.medisept.biz](http://www.medisept.biz)